 


3-5.Other interior features

Sun visors

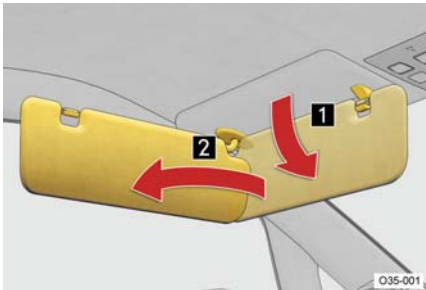

- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side position, flip down, unhook, and swing it to the side.

n Vanity mirror



A vanity mirror is provided on the passenger's sun visor.


### 3-5. Other interior features
 
## Power outlet

The power outlet can be used for 12 V accessories that run on less than 10 A.

**STEP 1** Open the glove box. (→P. 210)

**STEP 2**

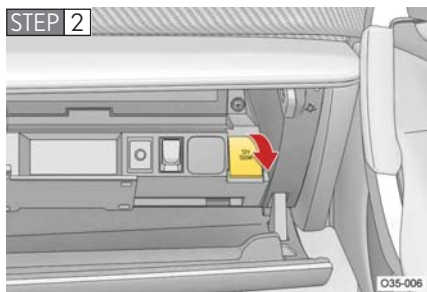

Open the lid.

#### n The power outlet can be used when

The ignition switch is in the "ACC" or "ON" position.

#### NOTICE

#### n To avoid damaging the power outlet

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

#### n To prevent blown fuses

Do not use an accessory that uses more than 12 V 10 A.

 
#### n To prevent battery discharge

Do not use the power outlet longer than necessary when the engine is not running.


3-5. Other interior features

Floor mats


Use only floor mats designed specifically for the LFA. Fix them securely in place onto the floor.

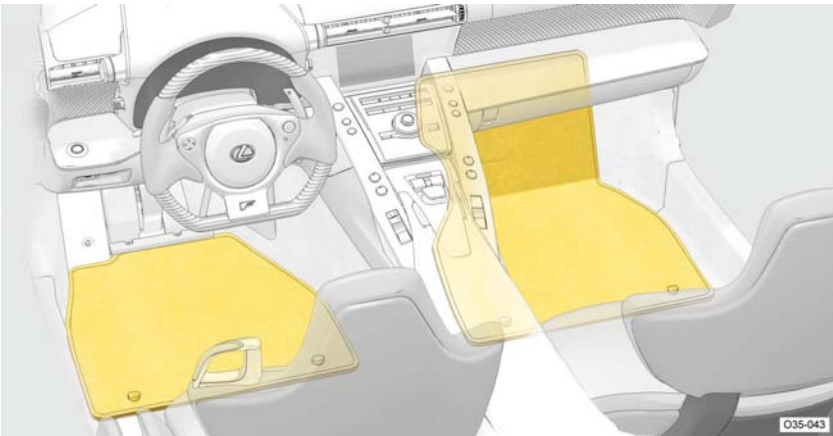

Removing the floor mats

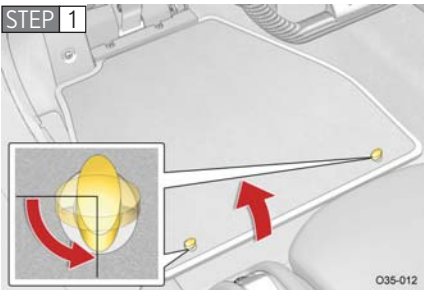 


 Turn the retaining hooks (clips) and lift up the floor mat.

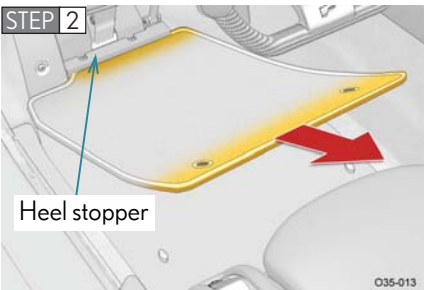


Driver's seat only:  
Pull the floor mat out from the groove under the heel stopper.

 
n Installing the floor mats

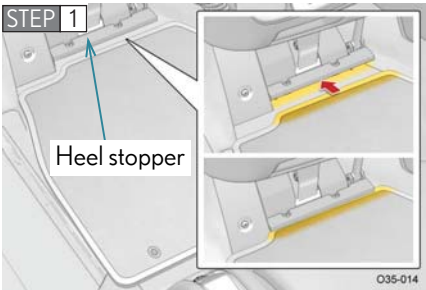

 Driver's seat only:  
Insert the front of the floor mat into the groove under the heel stopper.

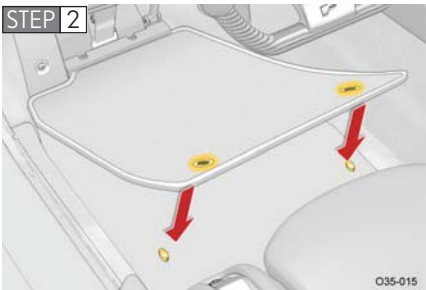

 Place the holes at the rear end of the floor mat over the retaining hooks (clips).

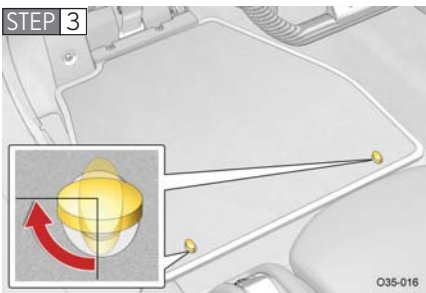

Turn the retaining hooks (clips).

## ! CAUTION

Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to a serious accident.

### n **When installing a floor mat on the driver's seat floor**

- 1 Only use floor mat designed for the driver's seat.
- 1 Do not use floor mats designed for other models even if they are Lexus Genuine floor mats.
- 1 Insert the floor mat firmly into the groove under the heel stopper.
- 1 Always install the floor mat securely using the retaining hooks (clips).
- 1 Do not use two or more floor mats on top of each other.
- 1 Do not place the floor mat bottom-side up or upside-down.
- 1 Do not install the floor mat designed for the passenger's seat on the driver's seat floor.

### n **Before driving**



Check the following on a regular basis:

 
- 1 The front of the floor mat is inserted firmly into the groove under the heel stopper.
- 1 The floor mat is held securely in the proper position by the retaining hooks (clips).

Make sure to perform these checks after cleaning the floor.

**3-5. Other interior features**


**Luggage compartment features**

**n Tonneau cover**

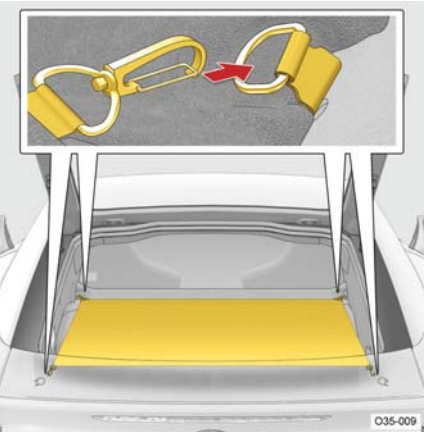

Attach the hooks to the brackets.

**n First-aid kit installation**

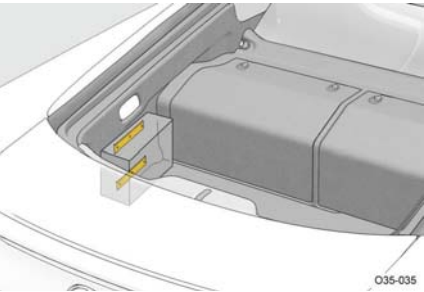 

A first-aid kit can be installed as shown.

### 3-5. Other interior features

 
## Safety Connect\*

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at Lexus.com. All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.

#### n System components

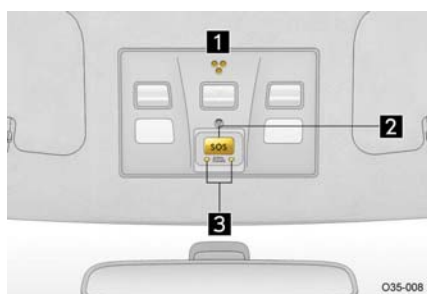

- 1 Microphone
- 2 "SOS" button
- 3 LED light indicators

\*: If equipped

#### **n Services**

Subscribers have the following Safety Connect services available:

##### **1 Automatic Collision Notification\***

Helps drivers receive necessary response from emergency service providers. (→P. 222)

\*: U.S. Patent No. 7,508,298 B2

##### **1 Stolen Vehicle Location**

Helps drivers in the event of vehicle theft. (→P. 223)

##### **1 Emergency Assistance Button (SOS)**

Connects drivers to response-center support. (→P. 223)

##### **1 Enhanced Roadside Assistance**

Provides drivers various on-road assistance. (→P. 223)

#### **n Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.



### **n Safety Connect Services Information**

- 1 Phone calls using the vehicles Bluetooth® technology will not be possible during Safety Connect.
- 1 Safety Connect is available beginning Fall 2009 on select Lexus models. Contact with the Safety Connect response center is dependent upon the telematics device being in operative condition, cellular connection availability, and GPS satellite signal reception, which can limit the ability to reach the response center or receive emergency service support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected.
- 1 Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location will function in the United States, including Hawaii and Alaska, and in Canada, and Enhanced Roadside Assistance will function in the United States (except Hawaii) and in Canada. No Safety Connect services will function outside of the United States in countries other than Canada.
- 1 Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

### **n Languages**

The Safety Connect response center will offer support in multiple languages. The Safety Connect system will offer voice prompts in English and Spanish. Please indicate your language of choice when enrolling.

### **n When contacting the response center**

You may be unable to contact the response center if the network is busy.

#### **Safety Connect LED light Indicators**

When the ignition switch is turned to the “ON” position, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.

The following indicator light patterns indicate specific system usage conditions:

- 1 Green indicator light on = Active service
- 1 Green indicator light flashing = Safety Connect call in process
- 1 Red indicator light (except at vehicle start-up) = System malfunction (contact your Lexus dealer)
- 1 No indicator light (off) = Safety Connect service not active

#### **Safety Connect services**

##### **n Automatic Collision Notification**

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

### **n Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

### **n Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

### **n Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

#### **Safety information for Safety Connect**

Important! Read this information before using Safety Connect.

##### **n Exposure to radio frequency signals**

The Safety Connect system installed in your vehicle is a low-power radio transmitter and receiver. It receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by the following U.S. and international standards bodies.

- 1 ANSI (American National Standards Institute) C95.1 [1992]
- 1 NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- 1 ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, and government health agencies and industries reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of Safety Connect complies with the FCC guidelines in addition to those standards.

**n License**

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501  
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239  
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338  
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569  
5,710,784 5,778,338

**n Certification for Lexus Enform with Safety Connect**

FCC ID: O9EGTM1

FCC ID: O6Y-CDMRF101

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

